

the vehicle and any vehicle contents.

- The lifting equipment or the jacking equipment must meet the operational standards of the lifting equipment or jacking equipment's manufacturer.
- Perform the vehicle lifting or jacking procedure on a clean, hard, dry, level surface.
- Perform the vehicle lifting or jacking procedure only at the identified lift points. DO NOT allow the lifting equipment or jacking equipment to contact any other vehicle components.

Failure to perform the previous steps could result in damage to the lifting equipment or the jacking equipment, the vehicle, and/or the vehicle's contents.

Vehicle Lifting - Frame Contact Lift

Front Lift Pads

When lifting the vehicle with a frame-contact lift, place the front lift pads as shown.

Rear Lift Pads

1. Install the J 43625 (1) into the rear frame rail shipping slots, lock into place and position the rear hoist pads.
2. When lifting the vehicle with a frame-contact lift, place the rear lift pads as shown.

Vehicle Jacking

Important: When you are lifting a vehicle with a vehicle jack or a service jack, block the wheels at the opposite end from which you are lifting. Use jack stands to provide additional support.

Lift the front/rear of the vehicle by placing the floor jack lift pad as shown.

Supporting the Vehicle with Jackstands

Important: Place jackstands ONLY under strong and stable vehicle structures.

<- Back

Forward ->

Document ID# 1684799

Feedback

Print